

Hardware Kit Installation Instructions

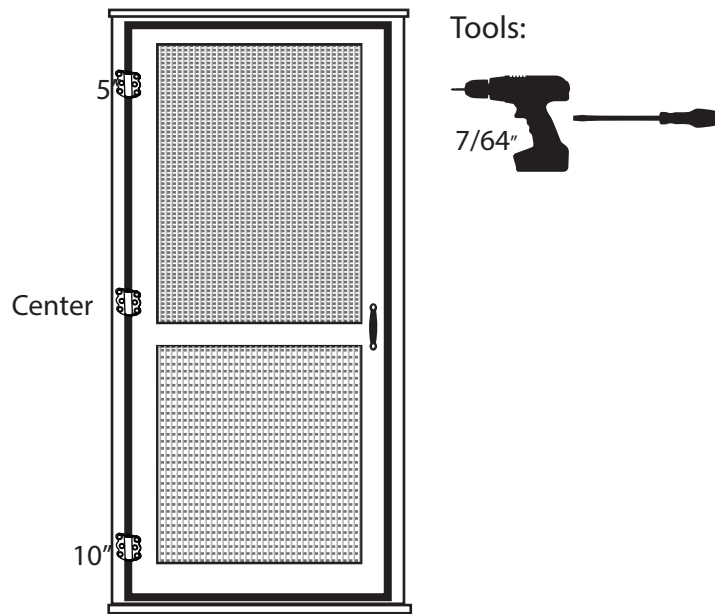


Fig 1.

Fig 1. Center hinges between door frame and door. Mark top hinge 5" below top of door. Mark lower hinge 10" up from bottom. Mark third hinge between top and bottom hinges.

Fig 2. Drill pilot holes and fasten hinges with enclosed screws.

Fig 3. Mark desired location for outside handle. Drill pilot holes and fasten with screws.

Fig 4. Mark hook and eye locations on door frame and door. Drill pilot holes. Fasten hook and eye to door frame and eye to door.

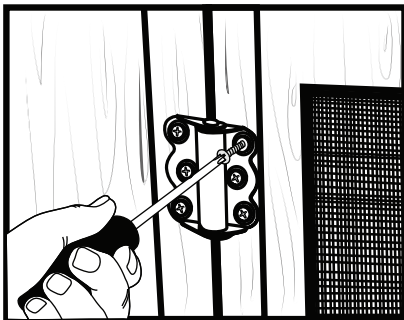


Fig 2.

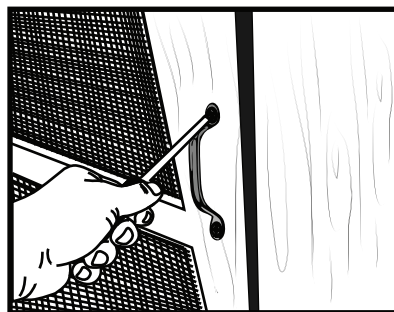


Fig 3.

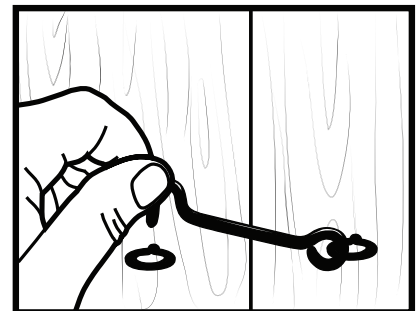


Fig 4.